







# ASSEMBLY INSTRUCTIONS

## CBC9

**rapidline**  
FURNITURE FOR TODAY  
2011-8-25

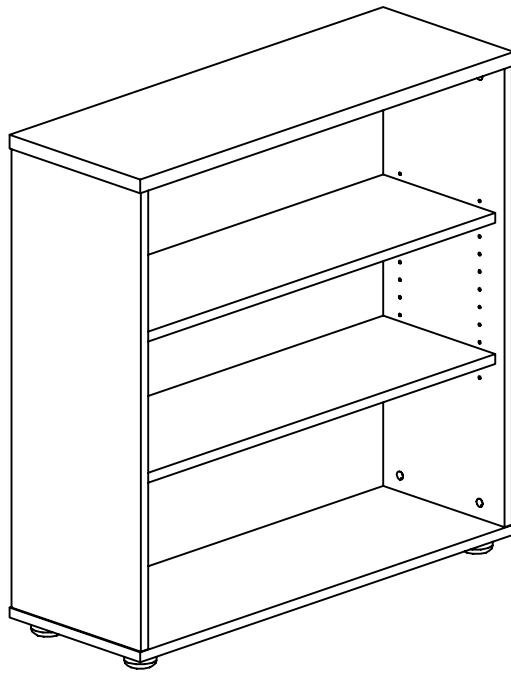

pin 6x35		1	16PCS
CAM		2	16PCS
Cam Cover		3	16PCS
Bot Mixfix		4	8PCS
CUSHION 25Hxφ52		5	4PCS
Screw 4x30		6	4PCS

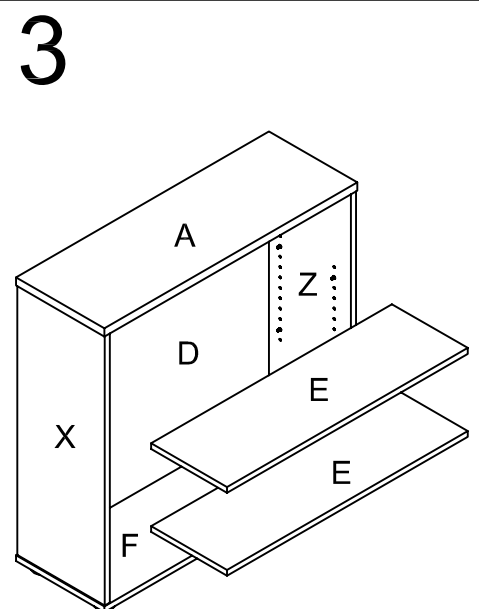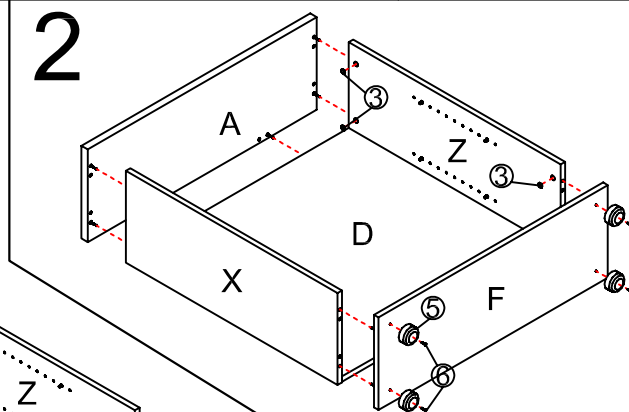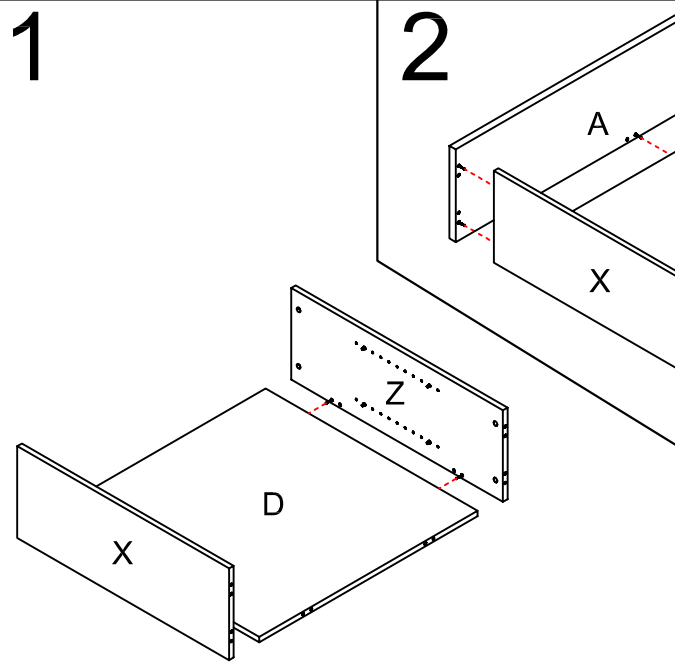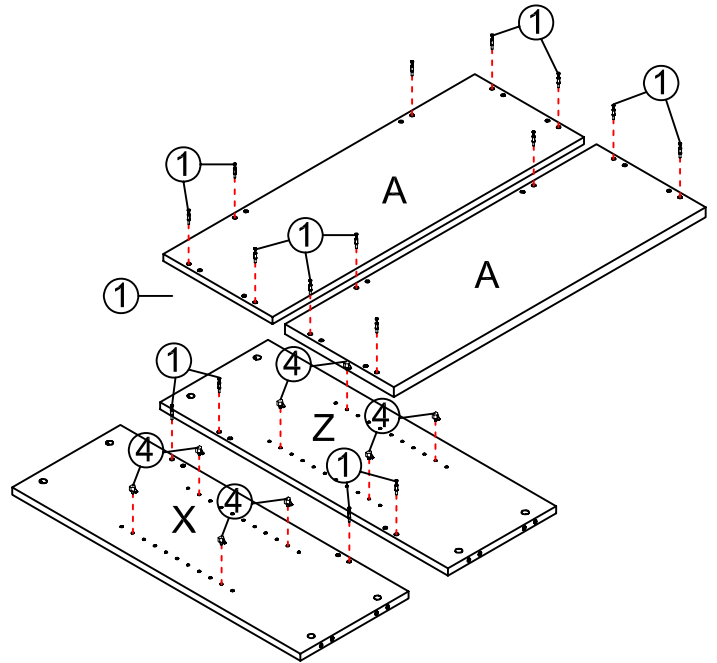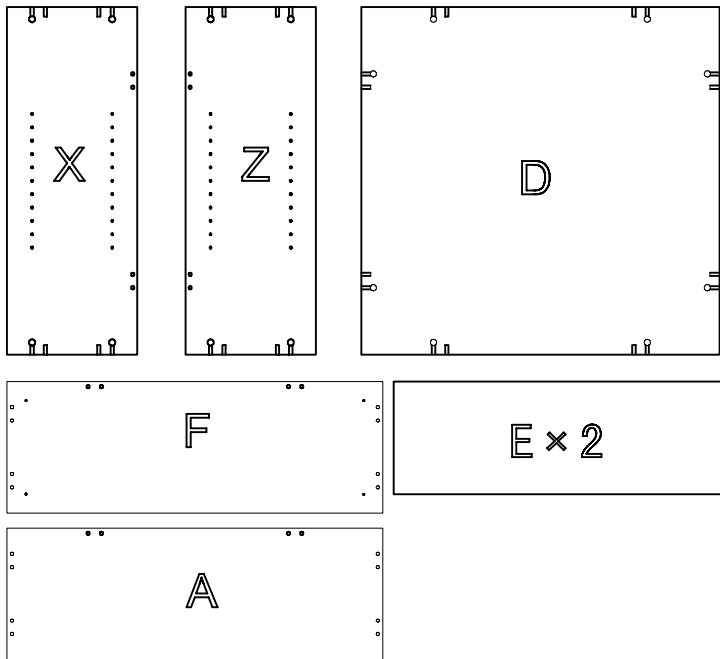


# ASSEMBLY INSTRUCTIONS

## CBC12






## CBC15

**rapidline**  
FURNITURE FOR TODAY

2011-8-25

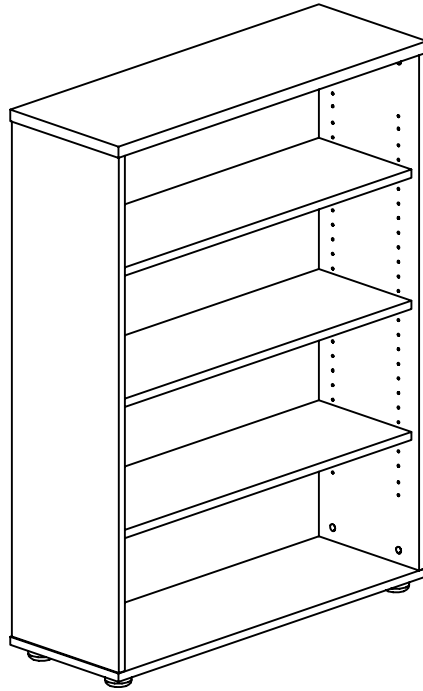


pin	6×35		1	20PCS
CAM			2	20PCS
Cam Cover			3	20PCS
Bot Minifix			4	12PCS
CUSHIOA	25H×φ52		5	4PCS
Screw	4×30		6	4PCS

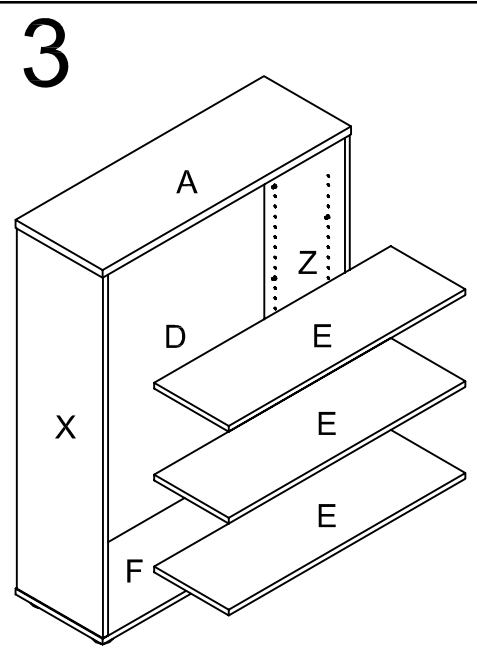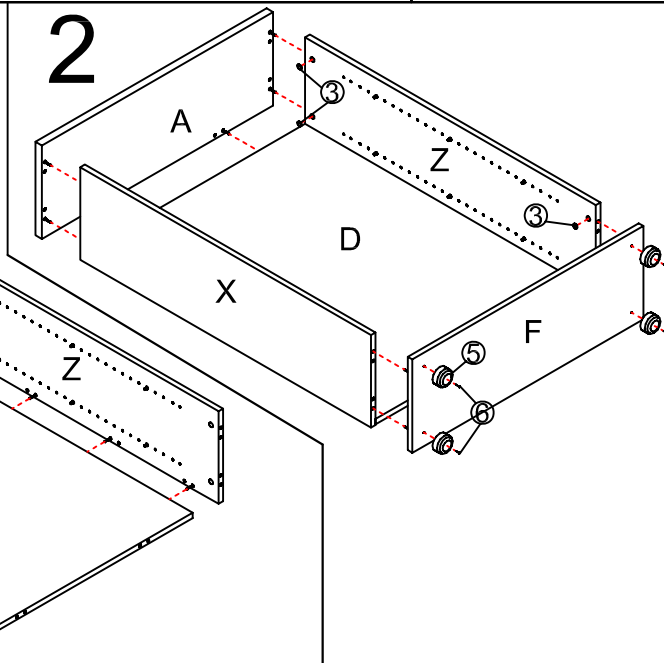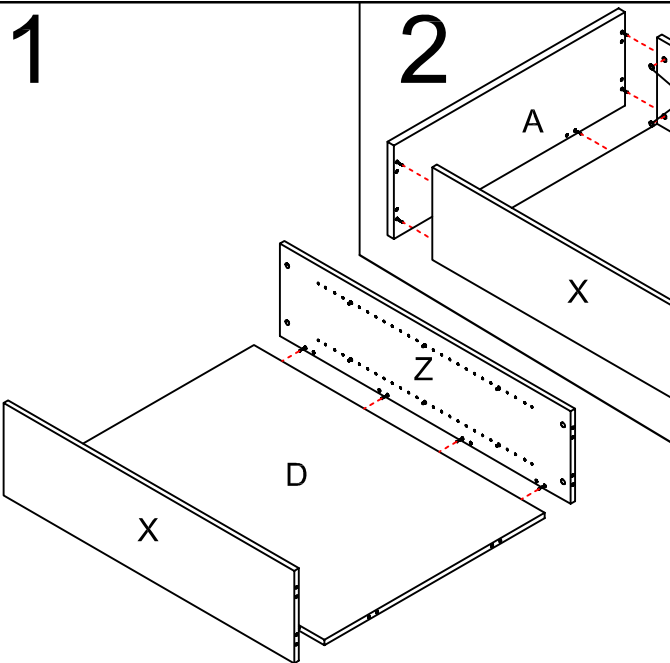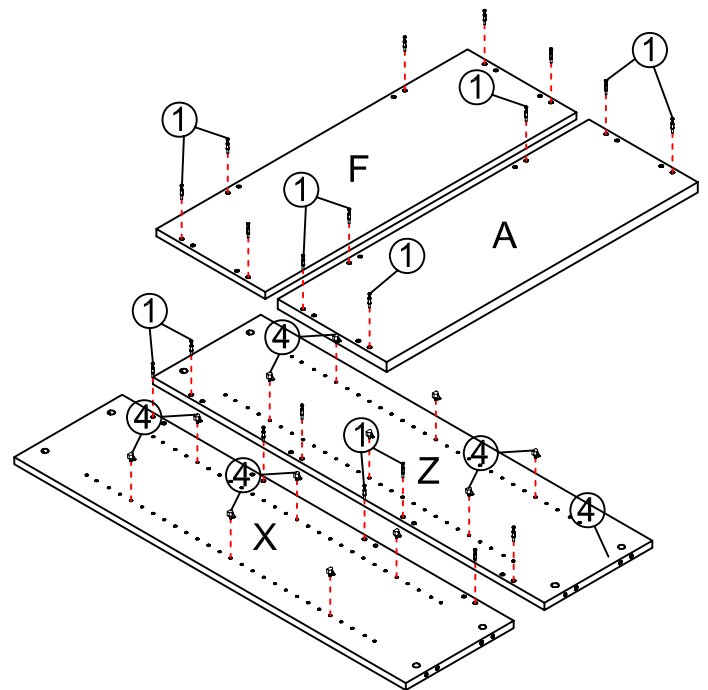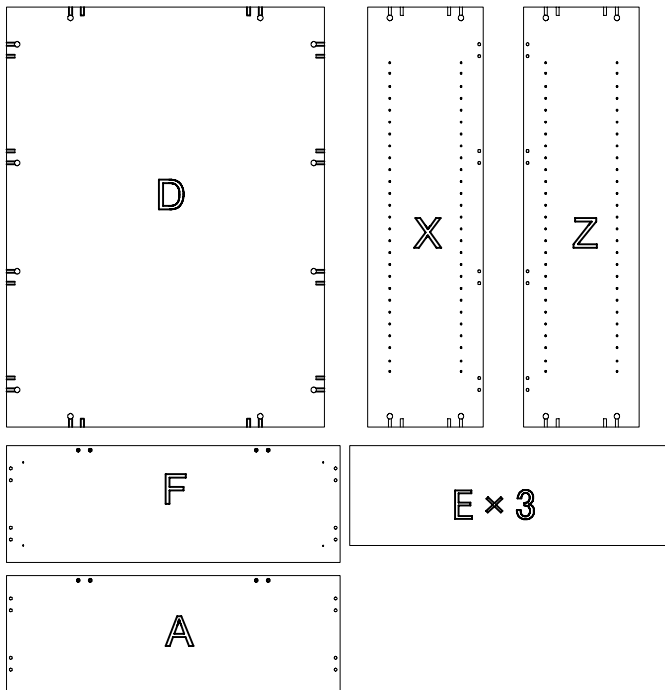

# ASSEMBLY INSTRUCTIONS

## CBC18

**rapidline**  
FURNITURE FOR TODAY  
2011-8-25

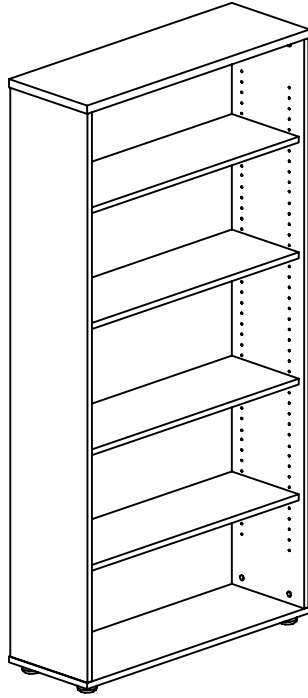

pin 6x35	1	20PCS
CAM	2	20PCS
Cam Cover	3	20PCS
Bot Minib	4	16PCS
CUSHION 25Hx 62	5	4PCS
Screw 4x30	6	4PCS

